

OPERATING INSTRUCTIONS & SETTING PROCEDURES


FOR NON-CALENDAR MODELS

Position 1

This is the normal running position.

Position 2: Setting the time

Gently pull the Crown out from the normal running position. Turn the hands forward to the correct time.

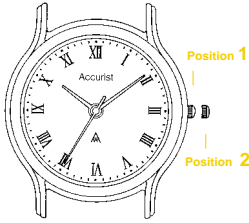

NOTE

When the Crown is in this position the battery is disconnected. The Second hand will not start moving until the Crown has been returned to Position 1. (3 hand models only)

FOR CALENDAR MODELS

Position 1: Normal Running Position

Position 2: Calendar Corrector

Gently pull the Crown out to position 2 (one click from the running position). To adjust the date turn the Crown anti-clockwise, clockwise to adjust the day. Once the date/day has been set, return the Crown to the normal running position.



IMPORTANT NOTE

- The Date will start to change at 11.25 p.m. and complete its change by 12 o'clock midnight. The Day will start to change at 12 o'clock midnight and complete its change by 4 a.m.
- Day/Date models have Bi-Lingual Day settings; if you select English, the watch will continue to display in English.
- Position 3: Setting the Time**
Gently pull the Crown out from the running position (two clicks), and then turn the hands forward to the correct time.
Note: When the Crown is in this position, the battery is disconnected. The Second hand will not start moving until the Crown has been returned to Position 1.

BRACELET ADJUSTMENT

- Should links need to be removed or added to fit the wrist, then the watch needs to be professionally adjusted and the following action should be taken.
- Use the enclosed wrist gauge to measure and mark the size of your wrist.
- Return the completed wrist gauge with your watch in a padded envelope by registered delivery to:

ACCURIST SERVICE CENTRE
DEPT B.S.D.
ASHER HOUSE, BLACKBURN ROAD
WEST HAMPSTEAD
LONDON NW6 1AW
ENGLAND.

OR YOUR NEAREST INTERNATIONAL SERVICE AGENT.

Please note (9ct gold) where links have to be added there is a charge per link, a quote will be sent.

ACCURIST QUARTZ GUARANTEE



The terms of this guarantee provide rights which are in addition to the consumer's statutory rights and do not limit or otherwise affect those statutory rights.

This is an extended warranty which covers your Accurist Gold watch for five years from the date of purchase against any defects in material or construction.

The guarantee is only valid if completed and dated at the time of purchase by your Accurist Stockist.

Service under the terms of the guarantee will only be provided if your watch is returned directly to the International Service Headquarters, or an International Service Agent.

CARE OF YOUR WATCH

Avoid Temperature Extremes

- Avoid leaving your watch in direct sunlight or in extremely warm locations for long periods of time: this will cause malfunctioning and shorten the life of the battery.
- Do not leave your watch for long periods of time in extremely cold places; this may cause your watch to gain or lose time. Should it begin to gain or lose time, place your watch on your wrist to restore its original accuracy.

Avoid Wet Conditions

- Gold watches are not water resistant, wet environments should be avoided.

Avoid strong shock

- Avoid dropping your watch, or subjecting it to any form of severe shock.

Keep your watch clean

- It may become difficult to pull out the crown due to dirt and dust getting caught between the crown and the watch case when the watch is worn for long periods of time. To help prevent this from happening:
 - Turn the crown freely back and forth occasionally, while it is in the normal set position.

Avoid Strong Magnetic Fields

- Keep your watch out of the immediate vicinity of strong magnets. Generally, your watch is not affected by magnetic fields from such household appliances as television sets and stereo equipment

Avoid Harmful Chemicals, Solvents and Gases

- Avoid wearing your watch in the presence of strong chemicals, solvents and gases. If your watch comes into contact with materials such as gasoline, benzene, paint thinner, alcohol, spray cosmetics, nail polish, nail polish remover, adhesives or paint, discolouration, deterioration or damage to the case, band and other components may occur.

Safety Note

- Always be sure to keep watch type batteries out of reach of infants and small children, should accidental ingestion occur, consult a doctor at once**
- IMPORTANT**
Do not attempt to replace the battery yourself, as this invalidates your guarantee.



This guarantee does not cover the following: Breakages caused from maltreatment, mishandling or accident; Water penetration; Batteries in electronic watches; The replacement of leather watch straps.

After the expiry of this guarantee the Accurist Service Centre and International Service Agents are at your complete disposal.

We will be pleased to quote for routine maintenance, oiling or repair of your watch by our factory-trained staff of experts. When returning your watch, please indicate brief details of the nature of the problem and the repair required.

INTERNATIONAL SERVICE HEADQUARTERS

ACCURIST WATCHES LTD
ASHER HOUSE, BLACKBURN ROAD, WEST HAMPSTEAD,
LONDON NW6 1AW, ENGLAND.

TELEPHONE: (44)+(20)+7447 3900, FAX: (44)+(20)+7447 3946

www.accurist.co.uk

