

.....  
PURCHASED FROM

.....  
DATE OF PURCHASE

.....  
MODEL NO

.....  
OWNERS NAME

.....  
ADDRESS

.....  
.....

Perforation

**Accurist Helpline**  
**020 7447 3945**

Further information or instructions can be obtained  
from the Accurist Helpline during office hours Monday to Friday.

Folding

**Accurist**  
**M E A N T I M E**

 
**Chronograph Setting Instructions**

For: OS60, OS10, OT10, FS60 & OS20

## **Contents**

<b>How to use these instructions</b>	3
<b>OS60, OS10 &amp; OT10 Operating Instructions</b>	5
<b>FS60 Operating Instructions</b>	9
<b>OS20 Operating Instructions</b>	13
<b>Care of your watch</b>	15
<b>Bracelet Adjustment</b>	19
<b>International Service Agents</b>	21
<b>Resistance to water</b>	25
<b>Accurist Quartz Guarantee</b>	30
<b>After Sales Service</b>	32
<b>Payment &amp; Postage Instructions</b>	33

## Caseback markings

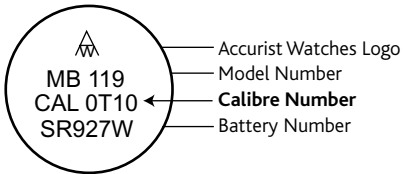

## **How to use these instructions**

This booklet contains setting instructions for the Accurist Chronograph series of watches. Each section describes a particular calibre (also called watch movement) which offers a unique set of functions and features. As such, it is necessary to identify the correct calibre of your watch before proceeding to the appropriate section (see diagram opposite).

 
## **Further information**

The latest setting instructions, technical manuals and interactive instructions are available from our web site at [www accurist.co.uk](http://www accurist.co.uk)

When on the web site please refer to 'After sales service/download manuals'

The Accurist technical helpline is also available during office hours:  
+44 (0)20 7447 3941 or email [service@accurist.co.uk](mailto:service@accurist.co.uk)

## OS60, OS10 & OT10 Operating Instructions

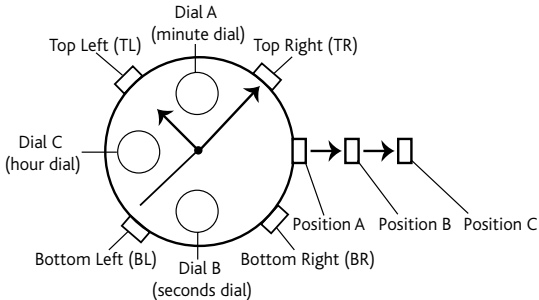

**To set the time:**

1. Gently pull out crown to position C.
2. Turn crown either way to correct time.
3. Push in crown to position A.

**To set the date:**

1. Gently pull out crown to position B.
2. Turn crown anti-clockwise to adjust date.
3. Push in crown to position A.

**Using the chronograph:**

1. Press BR Button to put the watch in Chronograph mode.  
Making sure all sub dials are zeroed. If not, refer to 'Chronograph Zero Reset'.
2. Press TR Button to start and stop the chronograph

## OS60, OS10 & OT10 Operating Instructions continued . . .

3. Press BR Button to reset the chronograph
4. When you have finished with the Chronograph function, press BR Button again; this re-starts the small second hand on Dial B.

 
**Note:** After 30 seconds the Second hand on Dial B will stop at the zero position, however, the time is still continuing to be measured in seconds and when TR Button is pressed to stop the timing, the second hands will automatically move to show the time.

**Chronograph zero set:**

This procedure is only necessary when the battery is replaced, or when the Chronograph hands do not return to the '0' position, when the Chronograph mode is selected.

1. Gently pull out crown to position C.
2. Push TR Button to advance the sweep second hand to the 12 O'clock position. Please note each push of the TR Button will advance the hand 1 second. Alternatively, depress and hold the Button for 2 seconds and the hand advances continuously.
3. Push BR Button; this automatically re-sets sub dials. Each subsequent push will advance the Second hand on sub dials by 1 marking. Alternatively, depress and hold Button for 2 seconds; the hand will advance continuously until released.
4. Push in crown to Position A.

## FS60 Operating Instructions

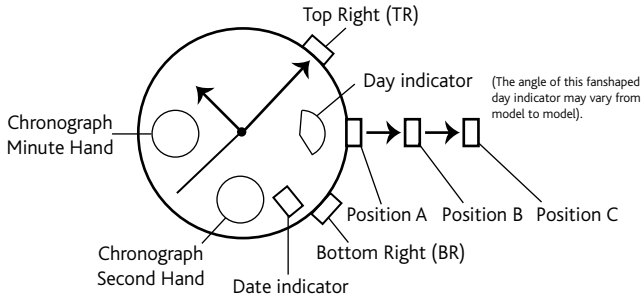

**To set the time:**

1. Gently pull out crown to position C.
2. Turn crown either way to correct time.
3. Push in crown to position A.

**To set the date:**

1. Gently pull out crown to position B.
2. Turn crown anti-clockwise to adjust date.
3. Push in crown to position A.

**Note:**

If the date is set between the hours of around 9.00pm and 1.00am, the date may not change on the following day.

## **FS60 Operating Instructions continued . . .**

### **To set the day:**

1. Gently pull out the crown to position B.
2. Turn the crown anti-clockwise to adjust day.
3. Push in crown to position A

### **Note:**

If the date is set between the hours of around 11.00pm and 2.00am, the date may not change on the following day.

**Using the chronograph:**

 
1. Press TR Button to start and stop chronograph.
2. Press BR Button to reset the chronograph.  
(the second and minute hands will return to the 12 o'clock (0) position)

**Chronograph zero set:**

This procedure is only necessary when the battery is replaced, or when the Chronograph hands do not return to the 12 o'clock (0) position.

1. Gently pull out crown to position C.
2. Push TR Button to advance the sweep second hand to the 12 o'clock position.  
Please note each push of the TR button will advance the hand 1 second.  
Alternatively, depress and hold the button for 2 seconds and the hand advances continuously.
3. Push in crown to position A.

## Cal OS20 Operating Instructions

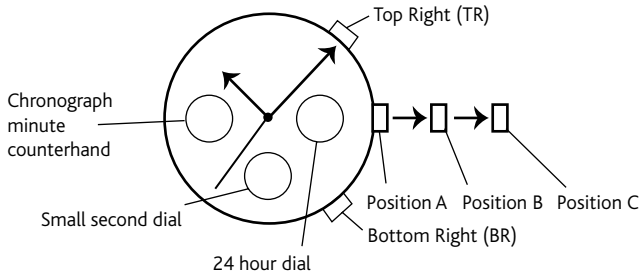

**For timing events up to 1 hour**

1. To start chronograph press button TR.
2. To stop chronograph press button TR
3. To return hand to zero position press button BR

**Troubleshooting - If your watch receives a knock and the second hand is not on zero:**

1. Pull out crown to Position C
2. Press TR to advance main second hand to zero
3. Press BR to advance minute counter hand to zero
4. Return crown to Position A

## Care of your watch

### Avoid temperature extremes

1. Avoid leaving your watch in direct sunlight or in extremely warm conditions for long periods of time: this will cause malfunctioning and shorten the life of the battery.
2. Do not leave your watch for long periods of time in extremely cold places; this may cause your watch to gain or lose time. Should it begin to gain or lose time, place your watch on your wrist to restore its original accuracy.

### Avoid wet conditions

1. Do not operate the buttons when your watch is wet, even on models marked 'Water Resistant'
2. Check case back markings and refer to the Resistance to water section below.

**Avoid strong shocks**

1. This watch will withstand the bumps and jars normally incurred during sports activities.
2. Avoid dropping your watch on the ground or otherwise imparting severe shock to it.

**Avoid strong magnetic fields**

1. Keep your watch away from strong magnets
2. Generally, your watch is not affected by magnetic fields from household appliances such as television sets and stereo equipment.

**Avoid harmful chemicals, solvents & gases**

1. Avoid wearing your watch in the presence of strong chemicals, solvents or gases.
2. Avoid materials such as gasoline, benzene, paint thinner, alcohol, spray cosmetics, nail polish, nail polish remover, adhesives or paint.

**Periodic inspection**

1. A regular 4 to 5 years service by an authorised Accurist technician will ensure trouble free operation.
2. Refer to the After Sales Service section on page 32 for details.

**IMPORTANT**

 
1. Keep the batteries out of reach of infants and small children. Should accidental ingestion occur consult a doctor immediately.
2. Do not attempt to replace the battery yourself as this invalidates your guarantee.

**Keep your watch clean**


Wipe off any moisture that adheres to the case, glass or band with a soft, clean cloth.

## Bracelet Adjustment

The bracelet requires a small adjustment and the model has a Z-type clasp.



 1. Depress the end of the spring bar on the centre clasp with a pin.



2. Relocate the spring bar in an alternative hole.

**The bracelet requires a significant adjustment or the model does not have a Z-type clasp.**

1. Use the enclosed wrist gauge to measure and mark the size of your wrist.
2. Return the completed wrist gauge with your watch
3. Follow the instructions in the After Sales Service section to return your watch for adjustment. Your watch will be adjusted free of charge.

## **International Service Agents**

### **International Service Headquarters**

Accurist Watches Limited, Asher House, Blackburn Road, West Hampstead,  
London, NW6 1AW

Tel: +44 (0)20 7447 3945, Fax: +44 (0)20 7447 3946

### **United Arab Emirates**

Al Abbas, P.O. Box 45999, Dubai, UAE

Tel: 00971 4 351 2440, Fax: 009714 351 2450

**Netherlands**

Sabre Nederland B.V., Ellermanstraat 23, 1099 BX Amsterdam, The Netherlands  
Tel: 0031 20 692 8888, Fax: 0031 20 665 2184

**Switzerland**

Nimex AG, Raffelstr 11, CH - 8045, Zurich, Switzerland  
Tel: 0041 44 462 91 91, Fax: 0041 44 462 91 81

**Norway**

Thune, Nils Hansensvei 2, N - 0667 Oslo, Norway  
Tel: 0047 22 70 08 40, Fax: 0047 22 70 08 41

**International Service Agents continued . . .****Kingdom of Saudi Arabia**

Al Asasyah, Sitteen Street, P.O. Box 19248 - 19249, Jeddah 21435

Tel: 00966 672 6826, Fax: 00966 676 2262

**N. Antilles**

J Best Jeweler, 2 Front Street, Philipsburg, St. Maarten, N. Antilles

Tel: 47 22 17 09 00, Fax: 47 67 53 54 43

**Cyprus**

A Chrysanthou Ltd, 35 Kappadokias Street, Strovolos 2028

Tel: 00357 22 512 122, Fax: 00357 22 512 880

## Resistance to water

INDICATIONS ON DIAL OR CASEBACK		LIGHT SPRAY, PERSPIRATION, LIGHT RAIN BATHING, ETC...	SWIMMING ETC...
DIAL	CASEBACK		
-	WATER RESISTANT	OK	X
WATER RESISTANT 50M (5 ATM)	WATER RESISTANT	OK	OK
WATER RESISTANT 100M (10 ATM)	WATER RESISTANT	OK	OK
WATER RESISTANT 150M (15 ATM) AND DEEPER	WATER RESISTANT	OK	OK

SKIN DIVING: DIVING WITHOUT AN AIR TANK	SCUBA DIVING: DIVING WITH AN AIR TANK	DIVING: WHEN USING A HELIUM ENRICHED ENVIRONMENT
X	X	X
X	X	X
OK	X	X
OK	OK	X



## Resistance to water continued . . .

### **IMPORTANT - NEVER PULL OUT THE CROWN WHEN THE WATCH IS WET.**

- Tighten screwlock crown completely
- Water resistance is not a permanent property. We strongly recommend you return your watch for resealing every 4 - 5 years and/or when changing batteries
- "Water resistant" may sometimes be abbreviated as "Water resist" or "WR".
- Never pull out the crown when the watch is wet.
- Always set the crown in the normal position.



## **Accurist Quartz Guarantee**

The terms of this guarantee provide rights that are in addition to your statutory rights and do not in any way limit or otherwise affect those statutory rights.

Your Accurist watch is guaranteed for 3 years from the date of original retail purchase against any malfunction of the watch movement due to defective materials or workmanship. This guarantee is applicable only to watches purchased in the United Kingdom. The guarantee is only valid if completed and dated at the time of purchase by your Accurist stockist.

To make a claim under the guarantee please return your watch directly to the International Service Headquarters at the address set out on page 21 or an International Service Agent.

**Accurist Quartz Guarantee continued . . .**

When returning your watch, please indicate brief details of the nature of the problem and the repair required.

We will, at our option, repair or replace your watch with a model of similar appearance or value.

After the expiry of this guarantee the Accurist Service Centre and International Service Agents are at your complete disposal.

We will be pleased to quote for routine maintenance, oiling or repair of your watch by our factory trained staff of experts.

This guarantee is provided by Accurist Watches Limited of Asher House, Blackburn Road, West Hampstead, London, NW6 1AW, England, United Kingdom

## After Sales Service

Each Accurist watch comes with a lifetime commitment to quality after sales service. Our award winning customer service team are dedicated to providing expert servicing from bracelet adjustments to full overhaul. We pride ourselves in identifying our customer's requirements and reacting to their individual needs. An expert watchmaker personally services each watch and Accurist guarantees quality at every step of the process.

## Payment & Postage Instructions

1. Complete the payment details form attached opposite.
2. Return the watch and payment details form together with this guarantee to the Accurist Service Centre address listed on page 21.
3. Enclose a cheque, postal order or MasterCard/Visa payment for **£5.00** payable to Accurist Service Centre. This covers return postage and insurance for loss or damage whilst in transit or undergoing repairs. No liability for loss or damage will be accepted without this remittance.
4. Please do not return your presentation box as we cannot guarantee its return.

Accurist Watches Limited  
 Asher House  
 Blackburn Road  
 West Hampstead  
 London, NW6 1AW

Telephone: +44 (0)20 7447 3900  
 Fax: +44 (0)20 7447 3949

Email: info@accurist.co.uk

For latest information please check our web site: [www.accurist.co.uk](http://www.accurist.co.uk)

Published June 2005

Folding

### For all other countries

1. Return the watch with payment to your nearest International service agent (listed on page 21).
2. Enclose a cheque for **€7.50**. This covers return postage and insurance for loss or damage whilst in transit or undergoing repairs. No liability for loss or damage will be accepted without this remittance.

Perforation

I enclose:  cheque  postal order  credit card,

debit card (issue no. ) payment for **£5.00**

Card No:

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Expires:

\_\_\_\_ / \_\_\_\_ / \_\_\_\_\_

Name:

\_\_\_\_\_

Address:

\_\_\_\_\_

Postcode:

\_\_\_\_\_

Signature:

\_\_\_\_\_