

 


World Timer Alarm Chronograph

Technical Guide Calibre CP00

1. Check caseback markings

Example:

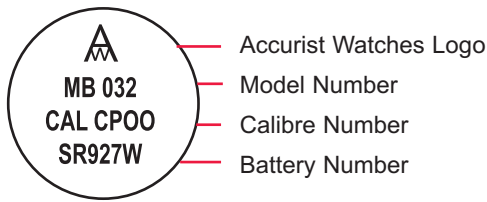


Features

- Analogue & digital time display
- 30 different time zones
- 3 Alarms
- Calender
- Chronograph
- Timer


Benefits

 - Quick & accurate time reading
- Worldwide time reading
- Alarms for different time zones
- Adjusts automatically for each city
- 24 hour stopwatch
- Timer

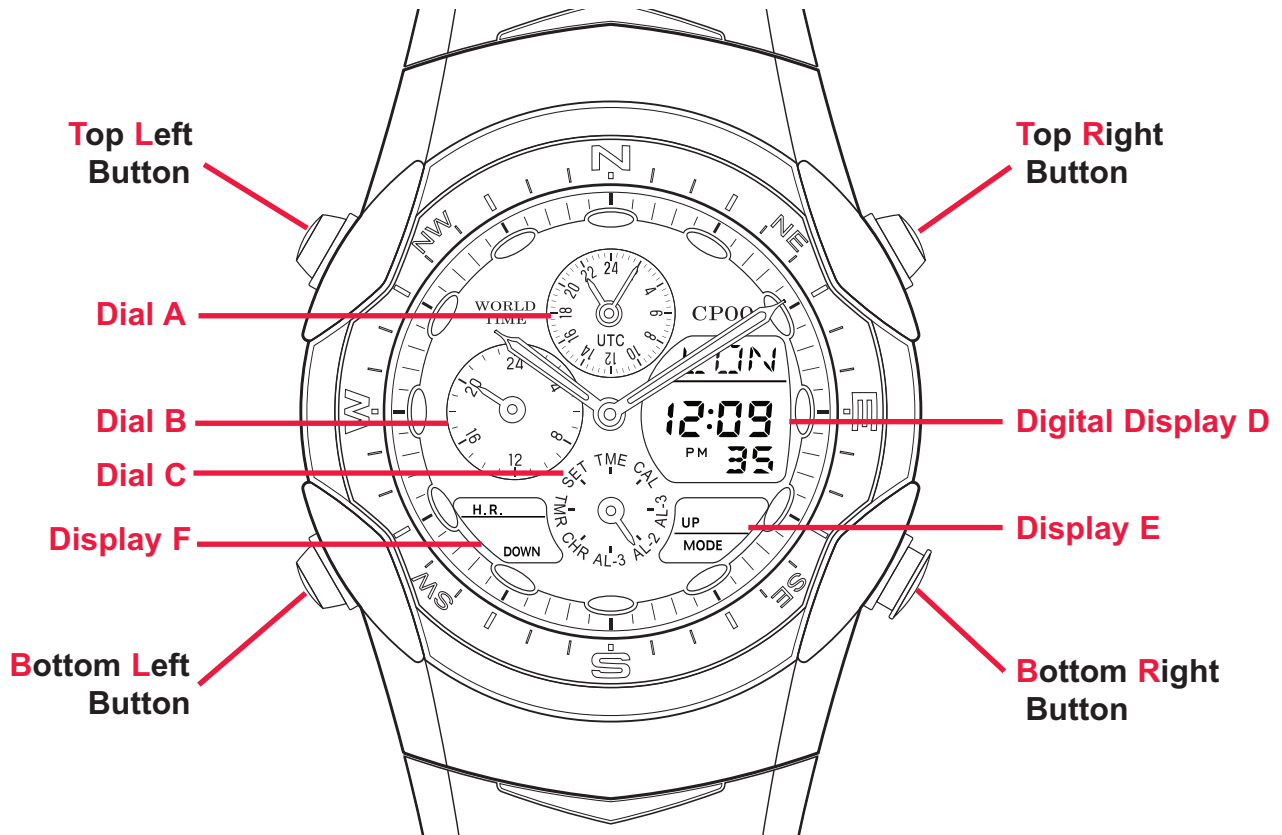


Key to buttons and display

 - **Button TR** is for adjustments UP when altering settings.
- **Button BR** is for function change.
- **Button BL** is for adjustments DOWN when altering settings.
- **Button TL** is for selecting 'Hands Retract'.
- **Dial A** is for is UTC Time Indicator, hours and minutes - (Universal co-ordinated Time) = GMT.
- **Dial B** is 24 hour indicator.
- **Dial C** is function choice indicator.

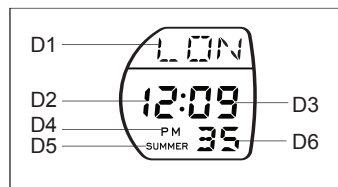

 - Display D**
 Digital Displays:
 When in TIME function: **TME**
D1: Name of City, eg. LON (London)
D2: Time in City (hours)
D3: Time in City (minutes)
D4: AM or PM
D5: Summer Time indicator
D6: Seconds

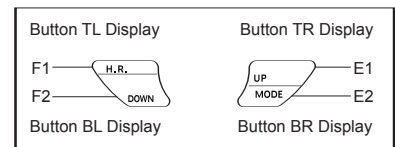

- Display E & F**
 The exact function each button performs is displayed in the small liquid crystal display panels **E & F**. They change dependant on which mode the watch is in.
E1 corresponds to **TR** button
E2 corresponds to **BR** button
F1 corresponds to **TL** button
F2 corresponds to **BL** button

QUICKSTART - SET THE TIME

1. Push the bottom right hand button until the mode hand indicator points to TME.
2. Press and hold the upper left button for three seconds. The hour and minute hand will retract to the 12 O'clock position.
3. Select the time zone on the digital display by pressing the upper right button or the lower left button.
4. Pull the bottom right button out one click. The bottom part of the digital display will start flashing. Press the bottom left button to adjust for daylight saving time.
5. Press the upper right button. You will see the seconds flashing on the lower half of the digital display. Press the lower left button to reset the seconds to 00.
6. Press the upper right button. You will see the minutes flashing. Press the lower left button to set the minutes to your current time.
7. Press the upper right button. You will see the hours flashing. Press the lower left button to set the hours to your current time.
8. Press the upper right button. You will see 12H or 24H flashing. Press the lower left button to switch between 12 hour and 24 hour.
9. Push the lower right button back in.

SET THE CALENDAR

1. Push the bottom right hand button until the mode hand indicator points to CAL.
2. Press and hold the upper left button for three seconds. The hour and minute hand will retract to the 12 O'clock position.
3. Select the time zone on the digital display by pressing the upper right button or the lower left button.
4. Pull the bottom right button out one click. You will see the month flashing on the digital display. Press the lower left button to change the month.
5. Press the upper right button and the date will begin flashing. Press the lower left button to change the date.
6. Press the upper right button. You will see the year flashing. Press the lower left button to change the year.
7. Push the lower right button back in.

SET THE ALARMS

1. Push the bottom right hand button until the mode hand indicator points to AL1, AL2 or AL3.
2. Press and hold the upper left button for three seconds. The hour and minute hand will retract to the 12 O'clock position.
3. Select the time zone on the digital display by pressing the upper right button or the lower left button.
4. Pull the lower right button out one click. You will see ON or OF flashing on the digital display. Press the lower left button to turn the alarm on or off.

5. Press the upper right button. You will see the hours flashing. Press the lower left button to change the hour.
6. Press the upper right button. You will see the minutes flashing. Press the lower left button to change the minutes.
7. Push the lower right button back in.

SET THE TIMEZONE

1. Setting the time zones allows you to add or remove cities on the digital display or switch between daylight saving and standard time. Begin by pressing the lower right button to move the mode hand indicator to SET mode on the bottom dial.
2. If the hour or minute hands are obscuring the digital display, press and hold the upper left button for three seconds. This will cause the hour and minute hand to retract to the 12 O'clock position.
3. Now pull the lower right button out one click. You will see the digital display flashing. Press the upper left button to select SET to display the city or OFF to not display the city. Press the lower left button to turn summer time on or off. Summer time is indicated on the lower part of the digital display. Daylight savings time must be manually set for each city.
4. Pressing the upper right button will allow you to scroll through all the cities. After setting, push the lower right button back in.

USING THE TIMER

1. Press the lower right button to move the mode hand indicator to TMR mode on the mode dial.
2. If the hour or minute hands are obscuring the digital display, press and hold the upper left button for three seconds. This will cause the hour and minute hand to retract to the 12 O'clock position.
3. Pull the lower right button out one click. You will see the minutes flashing in the digital display. Change the minutes by pressing the lower left button. Once you have set the minutes on the timer, push the lower right button back in.
4. Pressing the upper right button starts and stops the timer.
5. Press the lower left button when the timer is stopped to reset the timer to its initial preset time.

USING THE CHRONOGRAPH

1. To use the chronograph press the lower right button to move the mode indicator hand to CHR mode on the mode dial.
2. Press and hold the upper left button for three seconds. The hour and minute hand will retract to the 12 O'clock position.
3. To start or stop the chronograph press the upper right button. If you press the lower left button it will display the split time for 10 seconds.
4. When the chronograph is stopped press the lower left button to reset back to zero.

SET THE TIME ZONE

1. Setting the time zones allows you to add or remove cities on the digital display or switch between daylight saving and standard time. Begin by pressing the lower right button to move the mode indicator hand to SET mode on the bottom dial.
2. Press and hold the upper left button for three seconds. The hour and minute hand will retract to the 12 O'clock position.
3. Pull the lower right button out one click. You will see the digital display flashing. Press the upper left button to select SET to display the city or OFF to not display the city. Press the lower left button to turn summer time on or off. Summer time is indicated on the lower part of the digital display. Daylight savings time must be manually set for each city..
4. Pressing the upper right button will allow you to scroll through all the cities. After setting, Push the lower right button back in one click.

TROUBLESHOOTING

The analogue hands block the digital display.

1. Press and hold the upper left button for three seconds. The hour and minute hand will retract to the 12 O'clock position allowing a clear view of the digital display.
2. Press the upper left button to return the analogue hands to the previous position.

The analogue time does not match the digital time for the selected zone.

1. Push the bottom right hand button until the mode indicator hand points to TME.
2. Select the time zone on the digital display by pressing the upper right button or the lower left button.
3. Press the upper right and lower left buttons simultaneously and release. The hour and minute hand will go to the time zone shown on the digital display. At this point the digital display may go to UTC or another time zone. Press the upper right or lower left button to scroll to the time zone you just set the analogue hands to.

The analogue hands are not precisely synchronised with the digital time.

1. Press the lower right button to move the mode indicator hand to CHR.
2. Pull the lower right button out one click. The hour, minute and UTC hands will retract towards the straight up 12 O'clock position. You will see UTC on the top half of the digital display.
3. Press the upper right button to advance the hands to the straight up 24-hour position. Use the lower left button to go in reverse.
4. Press the upper left button. You will see HR on the top half of the digital display. Press the upper right button to advance the hour and 24-hour hand clockwise until they both point straight up at the 24-hour position. Use the lower left button to move the hand anti-clockwise.

5. Press the upper left button. You will see MIN on the top half of the digital display. Press the upper right button to advance the minute hand clockwise or the lower left button to move anti-clockwise until it is pointing straight up at the 12 O'clock position.

6. Push the lower right button back in one click.

The watch malfunctions in some way and the above procedures do not work.

1. Press the lower right button until the mode indicator hand points to TME.
2. Pull the lower right button out one click. Press the other three buttons down simultaneously for three seconds and release. You will see 8's on the digital display.
3. Press the upper left button. You will see UTC on the top half of the digital display. Press the upper right button to advance the hands of the top dial to the straight up 24-hour position. Use the lower left button to go in reverse.
4. Press the upper left button. You will see HR on the top half of the digital display. Press the upper right button to advance the hour and 24-hour hand clockwise until they both point straight up at the 24-hour position. Use the lower left button to move the hand anti-clockwise.

5. Press the upper left button. You will see MIN on the top half of the digital display. Press the upper right button to advance the minute hand clockwise or the lower left button to move anti-clockwise until it is pointing straight up at the 12 O'clock position.

6. Push the lower right button back in one click.

If you require technical assistance

The following resources are available if you require technical assistance –

1. CDROM giving step-by-step interactive instructions is supplied with the watch. Interactive instructions are also available from our website www.accurist.co.uk.
2. Accurist technical help line +44 (0)20 74473941 – during office hours.

CARE OF YOUR WATCH

Avoid temperature extremes

1. Avoid leaving your watch in direct sunlight or in extremely warm conditions for long periods of time: this will cause malfunctioning and shorten the life of the battery.
2. Do not leave your watch for long periods of time in extremely cold places; this may cause your watch to gain or lose time. Should it begin to gain or lose time, place your watch on your wrist to restore its original accuracy.

Avoid wet conditions

1. Do not operate the buttons when your watch is wet, even on models marked 'Water Resistant'
2. Check case back markings and refer to the Resistance to water section below.

Avoid strong shock

1. This watch will withstand the bumps and jars normally incurred during sports activities.
2. Avoid dropping your watch on the ground or otherwise imparting severe shock to it.

Avoid strong magnetic fields

1. Keep your watch away from strong magnets.
2. Generally, your watch is not affected by magnetic fields from household appliances such as television sets and stereo equipment

Avoid harmful chemicals, solvents and gases

1. Avoid wearing your watch in the presence of strong chemicals, solvents or gases.
2. Avoid materials such as gasoline, benzene, paint thinner, alcohol, spray cosmetics, nail polish, nail polish remover, adhesives or paint.

Keep your watch clean

Wipe off any moisture that adheres to the case, glass or band with a soft, clean cloth.

Periodic inspection

1. A regular 2 to 3 year service by an authorised Accurist technician will ensure trouble free operation.
2. Refer to the After Sales Service section below for details.

IMPORTANT

1. Keep the batteries out of reach of infants and small children. Should accidental ingestion occur consult a doctor immediately.
2. Do not attempt to replace the battery yourself as this invalidates your guarantee

AFTER SALES SERVICE

Each Accurist watch comes with a lifetime commitment to quality after sales service. Our award winning customer service team are dedicated to providing expert servicing from bracelet adjustments to full overhaul.

We pride ourselves in identifying our customer's requirements and reacting to their individual needs. An expert watchmaker personally services each watch and Accurist guarantees quality at every step of the process.

For UK and Eire

1. Complete the payment details form on the last page of this technical guide.
2. Return the watch and payment details form together with this guarantee to the Accurist Service Centre address below.
3. Enclose a cheque, postal order or MasterCard/Visa payment for £5.00 payable to Accurist Service Centre. This covers return postage and insurance for loss or damage whilst in transit or undergoing repairs. No liability for loss or damage will be accepted without this remittance.

4. Please do not return your presentation box as we cannot guarantee its return.

For all other countries

1. Return the watch with payment to your nearest International service agent below.
2. Enclose a cheque for US\$7.50. This covers return postage and insurance for loss or damage whilst in transit or undergoing repairs. No liability for loss or damage will be accepted without this remittance.

Accurist Service Centre

Asher House
Blackburn Road
West Hampstead
LONDON NW6 1AW
Tel: +44 (0)20 7447 3945
Fax: +44 (0)20 7447 3946
Email: service@accurist.co.uk
Web: www.accurist.co.uk

Technical help line

Tel: +44 (0)20 7447 3941
Fax: +44 (0)20 7447 3920
Email: service@accurist.co.uk
Web: www.accurist.co.uk

INTERNATIONAL SERVICE AGENTS

Australia

James Pascoe (PTY) Ltd, PO Box 175, Summer Hill,
Australia NSW 2130,
Tel: 61 2 9581 6999, Fax 61 2 9716 7880

Cyprus

Ora Joannides Ltd, 30 Athalassa Avenue, PO Box 4524
Nicosia, Cyprus.
Tel: 02-424647, Fax: 02-496672

Malta

Maxi Quartz Ltd, 311-313 Zabbar Road, Fgura, Malta.
Tel: 356 693843, Fax: 353 676393

New Zealand

James Pascoe Ltd, PO Box 68-107, Newton Auckland,
New Zealand,
Tel: 64 9 3778351, Fax: 64 9 3776375

Portugal

Distime, Rua Da Trindade N-12, 3 Andar, 1200 Lisboa,
Portugal.
Tel: 00-3511 321 4000, Fax: 00 3511 346 3258

Scandinavia

Gull & Ur, PO Box 8873, Youngstorget, 0028 Oslo, Norway
Tel: 47 22 17 09 00 Fax: 47 67 53 54 43

South Africa

American Swiss Jewellers (Pty) Ltd., Repair Department, PO
Box 6089,
Paroweast, 7501, South Africa.
Tel: 021-9381911 Fax: 021-9381831

South East Asia

Chung Nam Watch Co, Chung Nam Building, 20-21st Floors,
No.1 Lockhart Road, Hong Kong.
Tel: 5296111, Fax: 8650331

Switzerland

Accurist S.A., 9 Route Des Jeunes, Po Box 1211, Geneva 26, Switzerland
Tel: 022-342 71 60, Fax: 022-3427224

UAE (Dubai)

International Watch Co (Hourchoice), PO Box 2, Dubai (UAE),
Tel: 9714 3531400, Fax: 9714 3534992.

United States & Canada

Parsec Enterprises, 7501 N. Harker Drive, Peoria, Illinois 61615, U.S.A.
Tel: (309) 6896531, Fax: (309) 6896543

ACCURIST QUARTZ GUARANTEE

The terms of this guarantee provide rights that are in addition to the consumer's statutory rights and do not limit or otherwise affect those statutory rights. Your Accurist watch is guaranteed for 12 months from the date of purchase against any defects in material or construction. The guarantee is only valid if completed and dated at the time of purchase by your Accurist Stockist. Service under the terms of the guarantee will only be provided if your watch is returned directly to the Accurist Service Centre, or an International Service Agent. This guarantee does not cover the following: Breakages caused from maltreatment, mishandling or accident; Water penetration except in watches marked as water protected; Batteries in electronic watches; the replacement of leather watch straps.

After the expiry of this guarantee the Accurist Service Centre and International Service Agents are at your complete disposal. We will be pleased to quote for routine maintenance, oiling or repair of your watch by our factory-trained staff of experts. Please see the After Sales Service section for details.

BRACELET ADJUSTMENT

The bracelet requires a small adjustment and the model has a Z-type clasp.



FIG 1 DEPRESS SPRING BAR



FIG 2 RE LOCATE IN SMALLER ADJUSTMENT

The bracelet requires significant adjustment or the model does not have a Z-type clasp.

1. Use the enclosed wrist gauge to measure and mark the size of your wrist.
2. Return the completed wrist gauge with your watch.
3. Follow the instructions in the After Sales Service section to return your watch for adjustment. Your watch will be adjusted free of charge.

SPECIFICATIONS

Model

Combination multifunction alarm chronograph

Module

Calibre CP00

Type

Analogue/digital

Quartz combination multifunction alarm chronograph with 30 city times.

Accuracy of time measurements

(within normal temperature range): 5°-35°c/41°-95°f; ±20 seconds/month.

Operational temperature range

0° to 55°c/22° to 131°f.

Accuracy of chronograph

To 1/100th second

Display functions

Time: (hours, minutes, seconds) in 30 worldwide city times
Calendar: (year, month, date, day of week, summertime indicator)

Alarm modes 1, 2 and 3: three different daily alarms with different tones.

Chronograph: timing up to 24 hrs in 1/100 sec

Timer: counting down up to 60 mins in 1 min intervals

Set: reduce number of cities displayed and to activate summertime

Additional functions

Hand retraction for easy reading of digital displays.

Quartz oscillation frequency

32,768 hz (hz = oscillations in 1 second)

Battery

Code SR927W

Battery life

Approximately 3 years on newly fitted batteries dependent on amount of use of various functions.

Note

Product specifications may change without notice due to improvements.

